



CREST

LCD001, LCD002 & LCD003 Installation Instructions

Before beginning the installation of your new LCD mount, first verify that you have all of the necessary tools on hand. The following tools are required for proper installation:

- Philips screwdriver
- Stud finder for drywall installation
- Electric drill and 5/16" (8mm) masonry bit for concrete/brick installation

Also make sure that all of the hardware has been included with your mount. You should find the following:

- | | |
|---|--|
| <input type="checkbox"/> 2 x 1/7/8" Drywall Screw (A) | <input type="checkbox"/> 2 x Concrete Anchor (B) |
| <input type="checkbox"/> 4 x M4x12mm Bolt (C) | <input type="checkbox"/> 4 x M4x30mm Bolt (D) |
| <input type="checkbox"/> 4 x 3/4" Spacer (E) | <input type="checkbox"/> 1 x Security Bolt (F) |
| <input type="checkbox"/> 1 x Allen Wrench (G) | |


STEP 1 - Mounting the Wall Piece

Drywall Installation

IMPORTANT: *The weight of the LCD requires installation into a wood stud. Failure to do so may result in damage or injury.*

Use a stud finder to locate a wood stud where you want to install your mount. It is recommended that you verify the location of the stud using a small nail or an awl. You should use the center of the stud.


After the stud has been located, place the wall piece against the wall with the hook towards the bottom. Secure the wall piece using one drywall screw (A), but do not completely tighten yet. Using the integrated spirit level, carefully adjust the wall piece until it is level. Insert the remaining screw and tighten both screws.

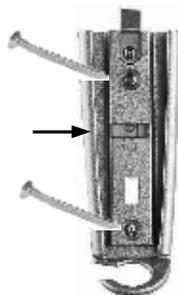

Concrete/Brick Installation

Begin by placing the wall piece into position against the wall with the hook towards the bottom. Using the integrated spirit level to keep it level, mark off the holes that will be used for securing the mount and place the wall piece aside. Next, drill holes using an electric drill and 5/16" (8mm) masonry bit. Remove any excess dust from the holes and insert a concrete anchor (B) into each hole. If necessary, use a hammer to lightly tap each anchor into place so that they are flush with the wall.

Once both anchors are in place, put the wall piece back into position. Attach the wall piece using the drywall screws (A) provided. Make sure both screws are secure.

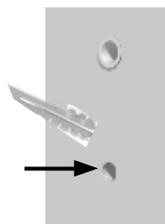


STEP 2 - Attaching the Arm to the LCD

Drywall Installation

IMPORTANT: Make sure the LCD is unplugged before starting this step of the installation and never lay the LCD face down as this may damage the viewing surface.


Before attaching the arm piece of the mount to your LCD, you must first determine which hardware to use. Do this by examining the back of the screen. If your screen has a flat back, use the M4x12mm bolts (C). If your screen has a recessed back, use the longer M4x30mm bolts (D) and 3/4" spacers (E). After you have determined the appropriate bolts, use them to attach the arm piece of the mount to the back of your screen. Be careful not to over-tighten the bolts.

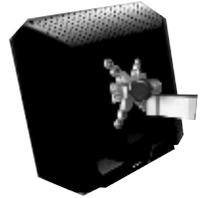

STEP 3 - Final Installation and Operation

Final Installation

To complete the installation, simply slide the arm piece with your screen attached into the wall piece. The plastic tab on the top of the wall piece should click indicating that the arm piece is secure. If you need to remove the arm piece, push in on the tab and slide the arm up. For additional stability and security, insert the security bolt (F) into the hole located on the base of the arm piece and tighten using the allen wrench (G) provided.

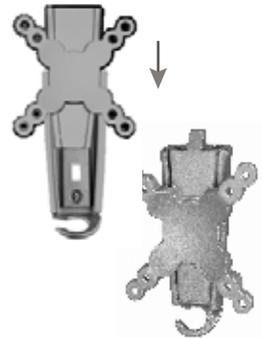

Operation and Adjustment

NOTE: Adjustment of your LCD002 and LCD003 may vary by model.

On most models, the tilt angle of your screen is adjustable. To adjust the tilt, first locate the adjustment knob directly behind the LCD mounting point. Loosen it by turning the knob counter-clockwise. Adjust the tilt to the desired level and retighten the knob to lock the adjustment in place (see illustration).

Other viewing adjustments can be made by simply moving the arm into the desired position. If you find that a joint is too tight or too loose, you can adjust the tightness of that joint. To do this, first examine the joint, if your mount includes an adjustment knob at the joint, turn the knob clockwise to tighten and counter-clockwise to loosen. If your mount does not have a knob, use the allen wrench (G) from your hardware kit to tighten or loosen the nut at the joint.



Customer Support

165 South Pine Rd
PO Box 5658
Brendale
Qld 4500

